



## Operating Procedure **BL-10300**

### Start Up

1. Install the Clevis Pin Hoist Mount, ZGS-12608-1 using the pins and retaining pins
2. Install the BL-10300 hoist on the mount using the pins and retaining pins
3. Raise the mount into position, and install pins in load cells, lower chain hoist to apply the load to the lead cells
4. Attach the hydraulic lines, insuring the up and down lines are attached properly
5. Attach the electrical harness connector
6. Position the Zephyr RHGSE under the hoist
7. Pull out the E-Stop button to turn on power
8. Press the Pump Start button to start the hydraulic pump
9. Activate the hoist select switch on the motor starter panel to select the BL-10300
10. Turn the Pressure switch to on, pressure should develop on the pressure gage
11. Turn the Power switch on the control box to on, the load indicator should illuminate
12. Press the Tare button on the load display to zero out the load with no load on the cable
13. Pull up the locking ring on the Joystick controller and activate the hoist in the extend direction
14. Attach the cable to the Zephyr RHGSE and operate the hoist in the down direction
15. Follow the operating instructions for the Zephyr RHGSE while running the hoist



## Operating Procedure **BL-10300**

### Shut Down

1. Disconnect the cable from the Zephyr RHGSE
2. Retract the cable to full in and insure the full up limit switch activates and the bumper compresses properly
3. Turn of the Power switch on control box
4. Turn the Pressure switch to off
5. Push in E-stop button
6. Detach the electrical harness connector
7. Detach the hydraulic lines
8. Raise the rescue hoist mount with the chain hoist and remove the pins
9. Lower hoist to lowest position
10. Remove the hoist from hoist mount and stow the pins properly