



## Operating Procedure **BL-29900**

### Start Up

1. Install Hanging Hoist Mount, Arm using the pins and retaining pins
2. Install hoist on mount using the pins and retaining pins
3. Raise mount into position, install the pins in the load cells, lower chain hoist to apply the load to the lead cells
4. Attach the Electrical harness connectors
5. Attach the 400Hz power cable to the receptacle
6. Turn on the 3 phase 400 hz power switch
7. Position the Zephyr RHGSE under hoist
8. Turn the Power switch on the control box to on, the load indicator should illuminate
9. Activate the hoist select switch on the control box to select the BL-29900 hoist
10. Press the Tare button on the load display to zero out the load with no load on the cable
11. Operate the hoist using pendant, or pilot override
12. Attach the rescue hoist cable to the Zephyr RHGSE and operate the hoist in the down direction
13. Follow the operating instructions for the Zephyr RHGSE while running the hoist



## Operating Procedure **BL-29900**

### Shut Down

1. Disconnect the rescue hoist cable from the Zephyr RHGSE
2. Retract the cable to full in and insure the full up limit switch activates and the bumper compresses properly
3. Turn of the Power switch on the control box
4. Press the 400 hz power switch to off
5. Detach the electrical harness connectors
6. Raise the rescue hoist mount with the chain hoist and remove pins
7. Lower hoist to lowest position
8. Remove the hoist and arm from the hoist mount