


Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

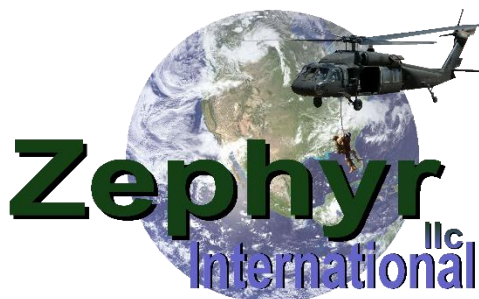

Manual & Electric RHGSE Setup Guide

Manual Rescue Hoist Ground Support Equipment

Reference: ZOM-11000-X

Electric Rescue Hoist Ground Support Equipment

Reference: ZOM-11300-X

CE Electric Rescue Hoist Ground Support Equipment

Reference: ZOM-11300-X-CE

Appendix A

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.1 Information

A.1.1 Support

Please contact Zephyr International LLC with any questions.

Zephyr Technical Support

Email: info@zephyrintl.com

Phone: 1-843-365-2675

Online Support

Visit website at www.zephyrintl.com

- Sign up for the Members Only section, browse available information and resources.
- Register your serial number information and identify a point of contact for future service bulletin release(s).

A.1.2 Table of Contents

A.1 Information	2
A.1.1 Support	2
A.1.2 Table of Contents	2
A.2 Uncrating	3
A.2.1 Open Crate	3
A.2.2 Install Ramp	3
A.2.3 Remove MagSens Box	4
A.2.4 Remove shipping braces and desiccant pouch	4
A.2.5 Support Ramp	5
A.2.6 Engage Swivel Locks	5
A.2.7 Release Tow Handle	5
A.2.8 Remove RHGSE	6
A.2.9 Unlock Swivel Locks	6
A.2.10 Additional components found in RHGSE and crate	7
A.2.11 Save Shipping Crate	7
A.3 RHGSE Assembly	8
A.3.1 Attach Upper Weldment	8
A.3.2 Attach Lubridryer	8
A.3.3 Attach Load Indicator Holder and Load Indicator	9
A.3.4 Charge MagSens System (if purchased)	10

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.2 Uncrating

The equipment is shipped in a sturdy wooden crate specifically designed for transport and storage of the RHGSE. The following steps are designed to inform the user on the best practices for removing the RHGSE from the shipping crate.


A.2.1 Open Crate

- Remove all screws marked red 'R' on the front panel and both side panels. As highlighted by the red arrows below.



A.2.2 Install Ramp

- Remove the front panel and lay on the crate lip to use as a ramp. Install a single screw through the ramp into the skit to prevent it from moving while rolling the RHGSE out of the crate.

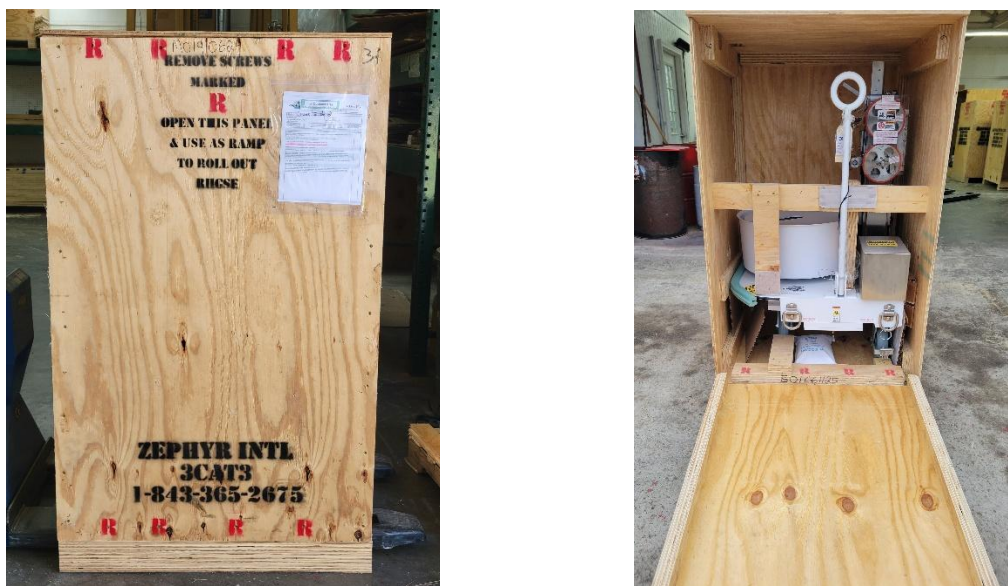

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.2.3 Remove MagSens Box

NOTE:

A MagSens may be in the compartment or secured to hold down depending on the configuration.


Loose items may be in the compartment, inside Rotatub, or in separate box depending on the configuration.

- If a MagSens was purchased, remove the screws marked with a red 'R' and remove the MagSens compartment panel. Carefully remove all of the contents.



A.2.4 Remove shipping braces and desiccant pouch

- Remove the 2x4 hold down, upper 2x4, lower 2x4 wheel stop, and cardboard from sides as shown below.
- Remove desiccant pouch before rolling out RHGSE.

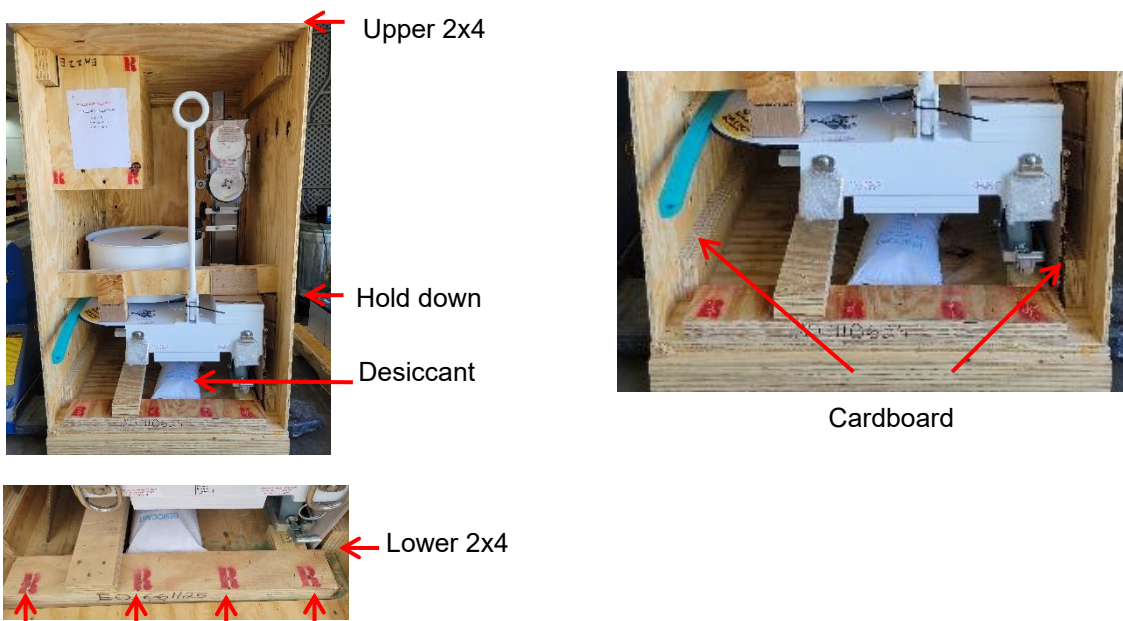

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	


A.2.5 Support Ramp

- Stack the (2) shipping braces on top of each other and place them under the ramp for support. The ramp will sit on the lip of the crate.



A.2.6 Engage Swivel Locks

- The Swivel Locks should be engaged, and wheels should not be rotated until completely removed from the crate.

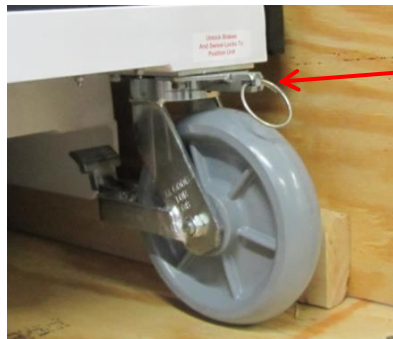

Swivel lock

A.2.7 Release Tow Handle

- Remove zip-ties or strapping that is used to retain the tow handle quick release pin (QRP) during shipping, and remove the QRP.



Zip tie

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.2.8 Remove RHGSE

- Roll the RHGSE out of the crate and down the ramp.



A.2.9 Unlock Swivel Locks

- Unlock the swivel locks to rotate caster wheels. Then lock the brakes and swivel locks.




Locked position



Unlocked position

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.2.10 Additional components found in RHGSE and crate

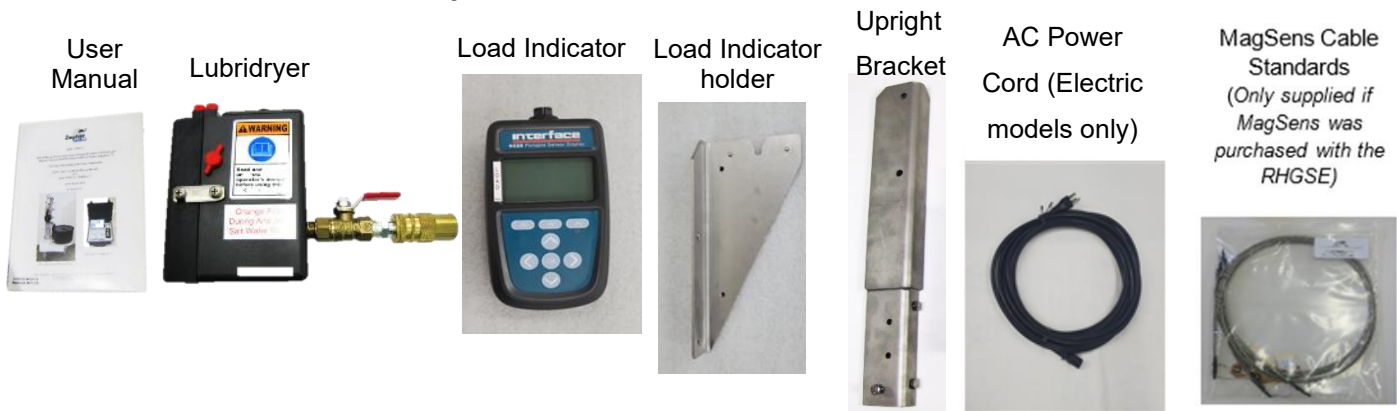

A.2.11 Save Shipping Crate

- Place all packaging materials back inside the shipping crate for future deployment or storage. Re-attach the front panel by installing the side screws.




Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.3 RHGSE Assembly

A.3.1 Attach Upper Weldment

- Attach it to the upright bracket to the upper weldment using the provided hardware.

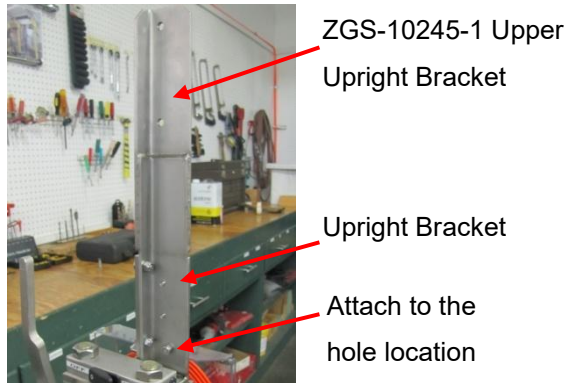

A.3.2 Attach Lubridryer

- Attach the airline to Lubridryer then mount it to the upright bracket with the included fasteners as shown below.

Attach Lubridryer using the supplied hardware.




Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.3.3 Attach Load Indicator Holder and Load Indicator

- Load Indicators and Load Indicator Holders have changed over time. Below are the 3 configurations:



Attach Load Indicator Holder using the supplied hardware.

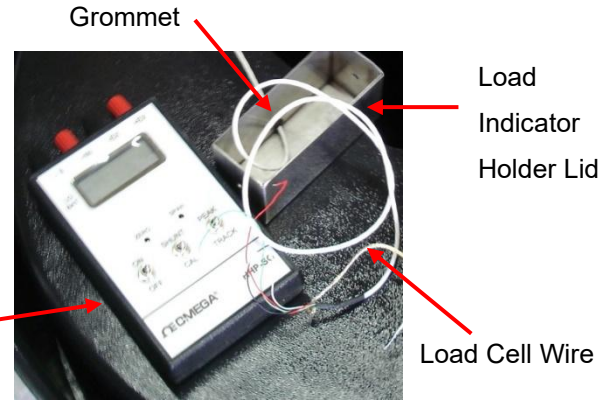


Omega Indicator Setup




Load cell wire slot



9320 Load Indicator Setup

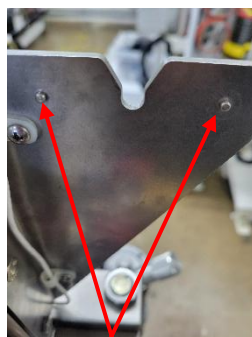

Locating pins

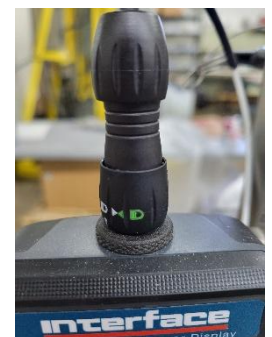

9325 Load Indicator Setup

Document Title		Appendix A, Manual & Electric RHGSE Setup Guide		
Document No.	Rev	Document Type	Release Date	
Appendix A	A	Instructions	February 16, 2026	

A.3.4 Charge MagSens System (if purchased)

- Plug in the MagSens system into an appropriate power source to ensure the on-board battery is maintained.

NOTE:

It is critical that the battery be charged as soon as uncrating and maintained in a charged state.

