


Document Title		Removal of Wire from the Alternate Input Power Assembly				
Document #	Rev	Type	Reason	Recommendation	Original Release Date	
ZSB-014	A 2016/08/30	Service Bulletin	Error	Mandatory	2015/04/30	

Removal of Wire from the Alternate Input Power Assembly (Hydraulic RHGSE Only)



Zephyr International LLC

5015 Enoch Rd, Conway SC 29526 USA


Phone 843-365-2675 * Fax 843-365-2677

Email: info@zephyrintl.com

Web: www.zephyrintl.com

Serving Helicopter Rescue Hoist Users Worldwide


Prepared by	Michael R Mitchell	mmitchell@zephyrintl.com
Checked by	Jim Brown	jbrown@zephyrintl.com
Approved by	Elizabeth Bielsa-Mitchell	zephyradmin@zephyrintl.com
Purpose	Error	
Recommendation is Mandatory or Optional	Mandatory	

Document Title		Removal of Wire from the Alternate Input Power Assembly				
Document #	Rev	Type	Reason	Recommendation	Original Release Date	
ZSB-014	A 2016/08/30	Service Bulletin	Error	Mandatory	2015/04/30	

Purpose: To alert of the need to remove a wire on the Alternate Input Power Receptacle.

Reason: The third small terminal on the MS3506-1 receptacle was incorrectly wired to the frame, and needs to be removed. The third terminal is +28 volts. If the alternate input power plug is installed it will short out and burn up the small wire.

Procedure: Locate, remove, and discard the small wire jumper from the small terminal on the back of the 28 Volt receptacle and the frame.

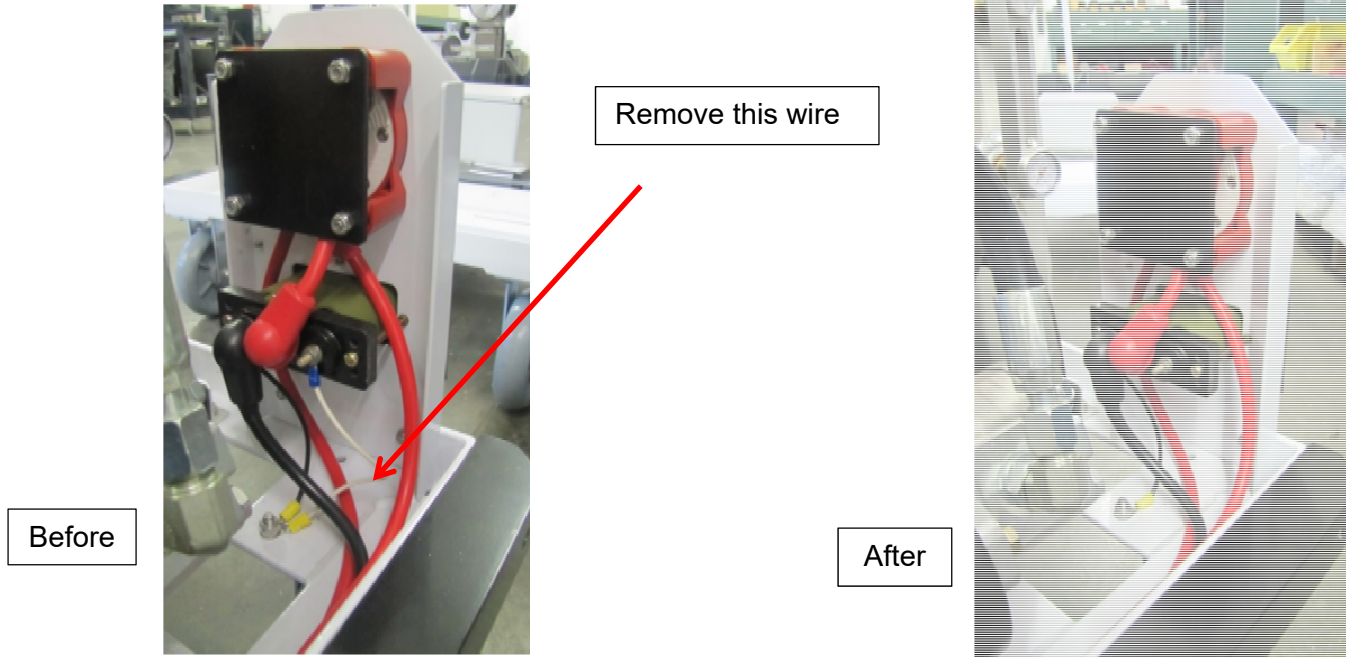

Hydraulic RHGSE serial numbers effected:

H00171108	H00181107	H00390809	H00400809	H00420110	H00930213
H00940213	H00950213	H01130513	H01140513	H01150513	H01160613
H01170613	H01180813	H01190713	H01201013	H01211013	H01221013
H01231113	H01240114	H01250114	H01261213	H01271113	H01280214
H01290214	H01300214	H01310214	H01320714	H01330314	H01340314
H01350314	H01360314	H01370414	H01380414	H01390414	H01400414
H01410414	H01420414	H01430414	H01440414	H01450814	H01460814
H01470814	H01480814	H01490814	H01500814	H01510814	H01520814
H01530814	H01540814	H01550914	H01560914	H01570914	H01580914
H01590914	H01600914	H01611014	H01621014	H01631214	H01640115
H01650115	H01660115	H01670115	H01680115	H01690115	H01700115
H01710115	H01720215	H01730215	H01740215	H01750215	H01760215
H01770215	H01780215	H01790215	H01800315	H01810315	H01830315
H01840315	H01850315	H01860315	H01870315	H01970215	H01980215
H02000315	H02010315				

For any questions please call or email Mike Mitchell at mmitchell@zephyrintl.com phone 843-365-2675